PEOPLE S 50 EURO 4

KYMCO

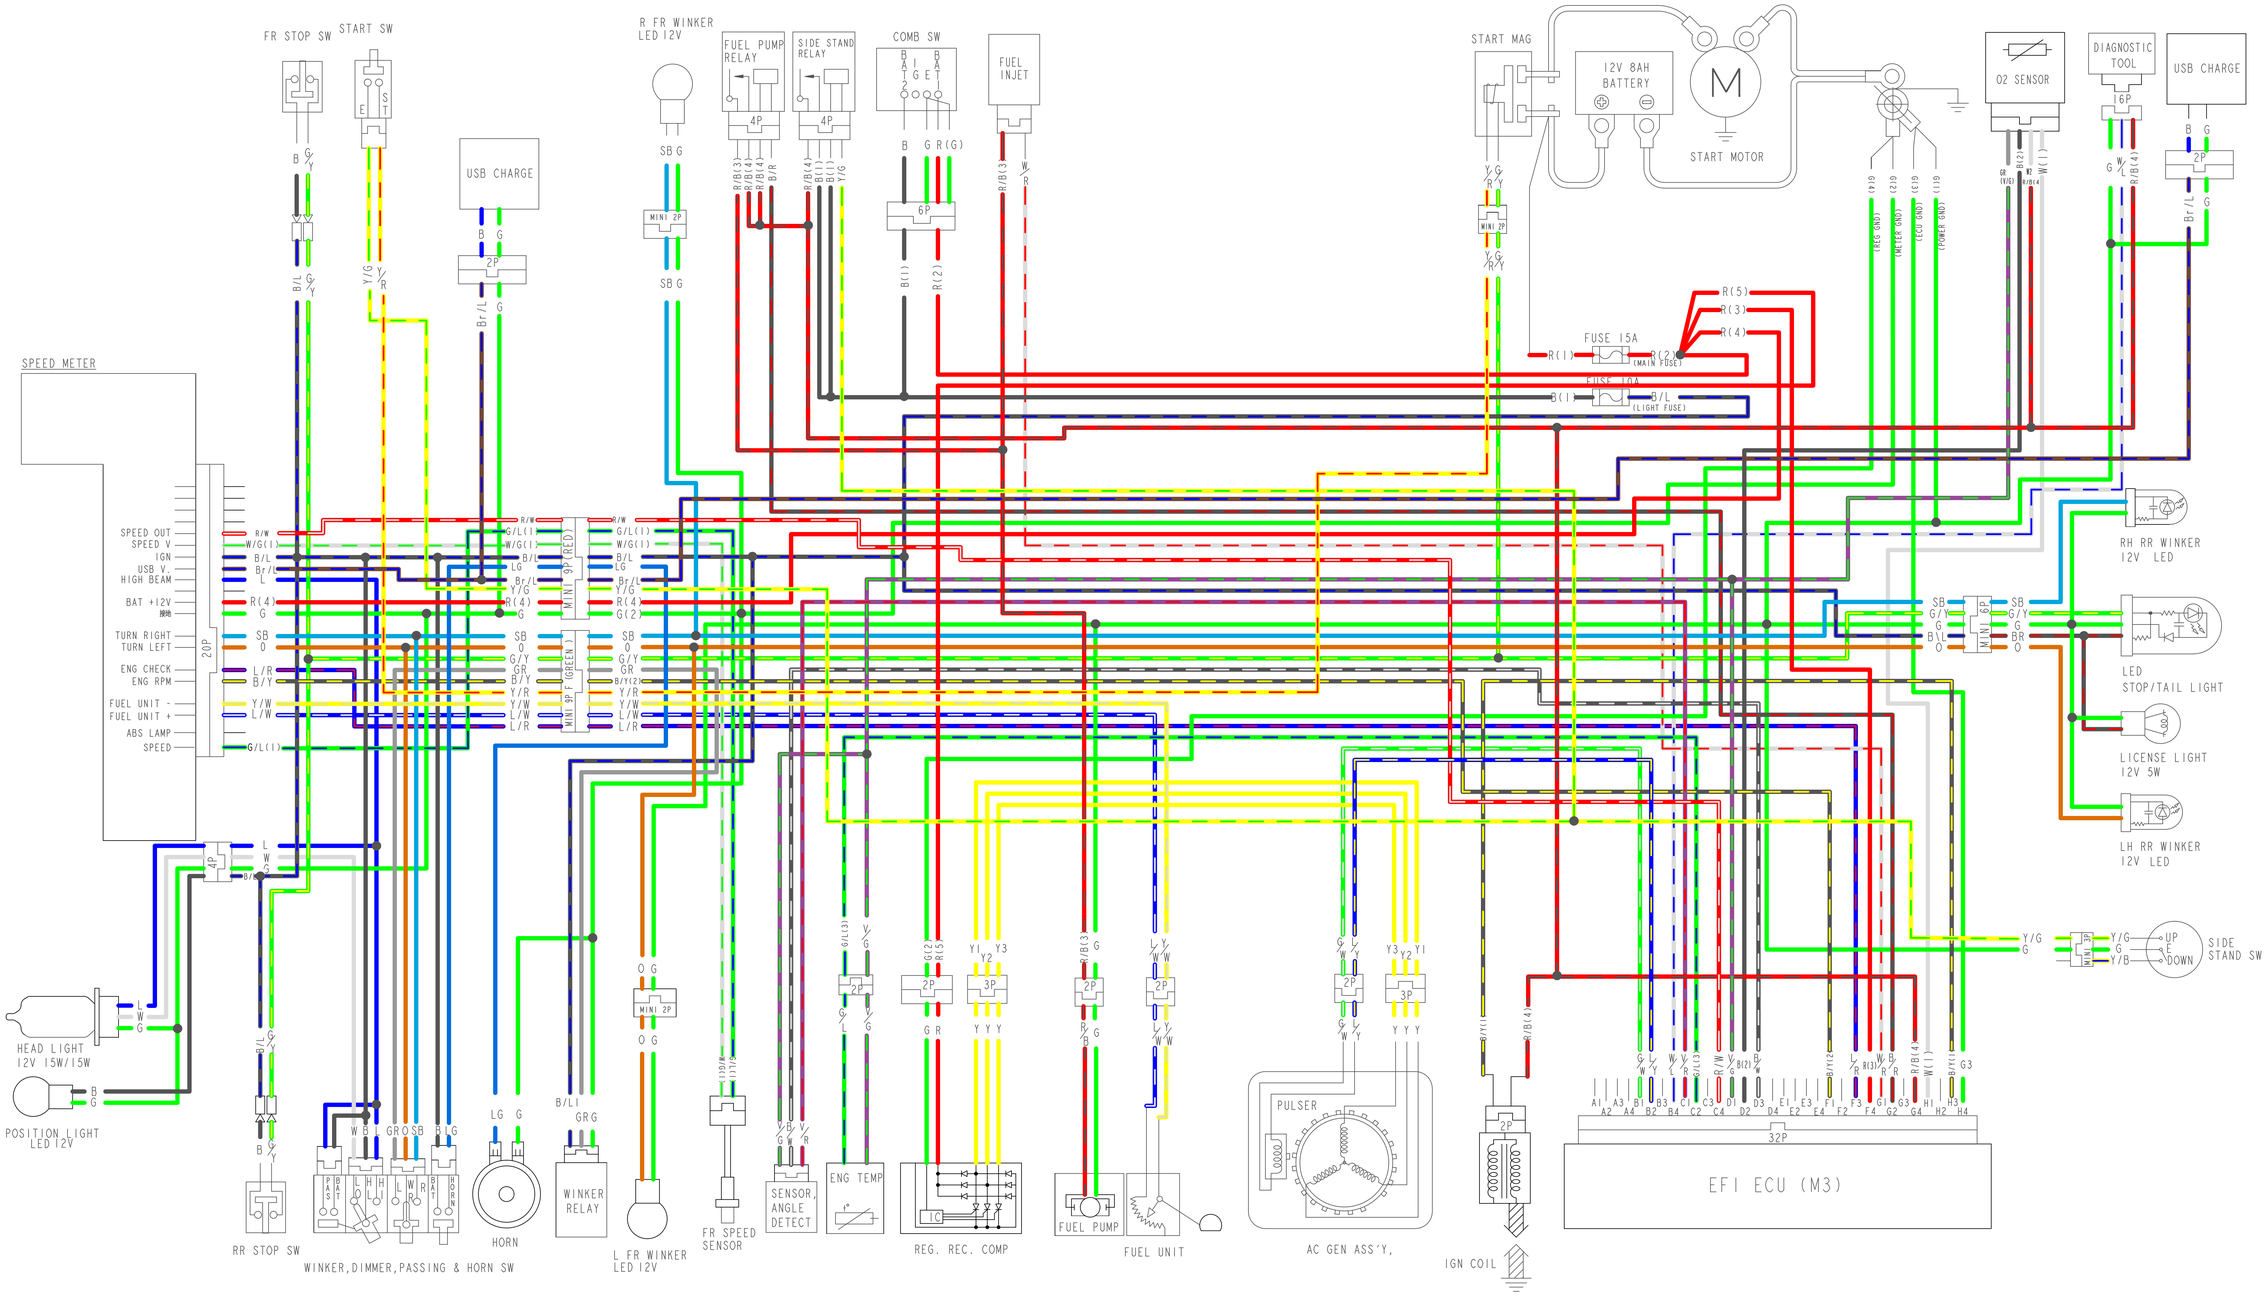

HORN SW

	HO	BATZ
FREE		
PUSH	○	○
CORD	LG	B

WINKER SW

	R	L	WR
L		○	
N			
R	○		
CORD	SB	O	GR

DIMMER & PASSING SW

	HL	HI	LO	BATZ	PASS
PASS				○	○
LO	○		○		
N			○		
HI		○	○		
CORD	B	L	W	B	L

START SW

	ST	E
FREE		
PUSH	○	○
CORD	Y/R	G

COMB SW

	BAT	BATZ	IG	E
LOCK				○
OFF			○	○
ON	○		○	
OFF	○	○	○	○
CORD	R	B		

C4	R/W	VEH_SPEED	VEHICLE SPEED
C3			
C2	G/L3	ECT	ENGINE TEMPERATURE SENSOR
C1	V/R	V_SENS	SENSOR SUPPLY
B4	W/L	K_LINE	SERIAL COMMUNICATIONS
B3			
B2	L/Y	CRK_POS	CRANKSHAFT POSITION SENSOR (+)
B1	G/W	CRK_NEG	CRANKSHAFT POSITION SENSOR (-)
A4			
A3			
A2			
A1			
PIN	COLOR	LABEL	PI FUNCTION

F4	R3	VBD	DIRECT BATTERY VOLTAGE
F3	L/R	CELP	CHECK ENGINE LAMP
F2			
F1	B/Y(2)	RPM	ENG SIGNAL
E4			
E3			
E2			
E1			
D4			
D3	B/W	TSW	TILT SWITCH
D2	B2	HEGO_SENS	HEATED O2 SENSOR
D1	V/G	SGND	SENSOR GROUND
PIN	COLOR	LABEL	PI FUNCTION

H4	G3	PGND	POWER GROUND
H3	B/Y1	IGN	IGNITION COIL
H2			
H1	W1	HEGO_HEAT	HEATED O2 SENSOR
G4	R/B4	VBK	BATTERY VOLTAGE AFTER KEY
G3			
G2	B/R	FUEL_PUMP	FUEL PUMP
G1	W/R	INJ	INJECTOR
PIN	COLOR	LABEL	PI FUNCTION